



Olympus Stylus Tough TG-2 iHS Battery Replacement

This guide will illustrate how to access and remove the battery.


Written By: Yushu Liu



INTRODUCTION


Battery dead? It may be time to replace it. This guide will walk you through the simple steps to access and replace your battery.

Step 1 — Battery

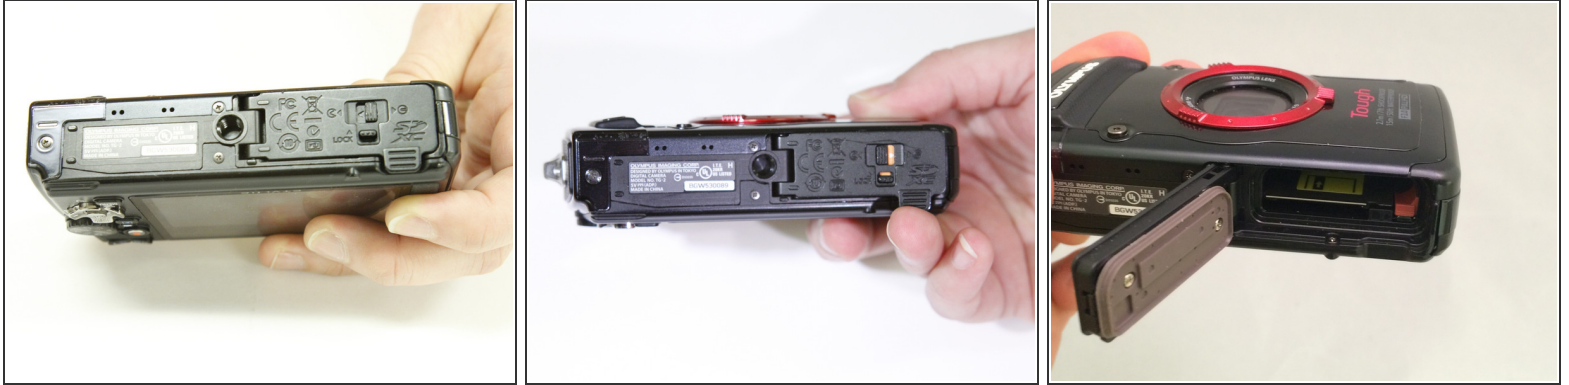

- Locate the two locking tabs on battery/card cover on the bottom of the camera.
- Slide the tab labeled lock to show orange.
- Slide the battery/card cover lock to reveal orange and the door will spring open.

Step 2

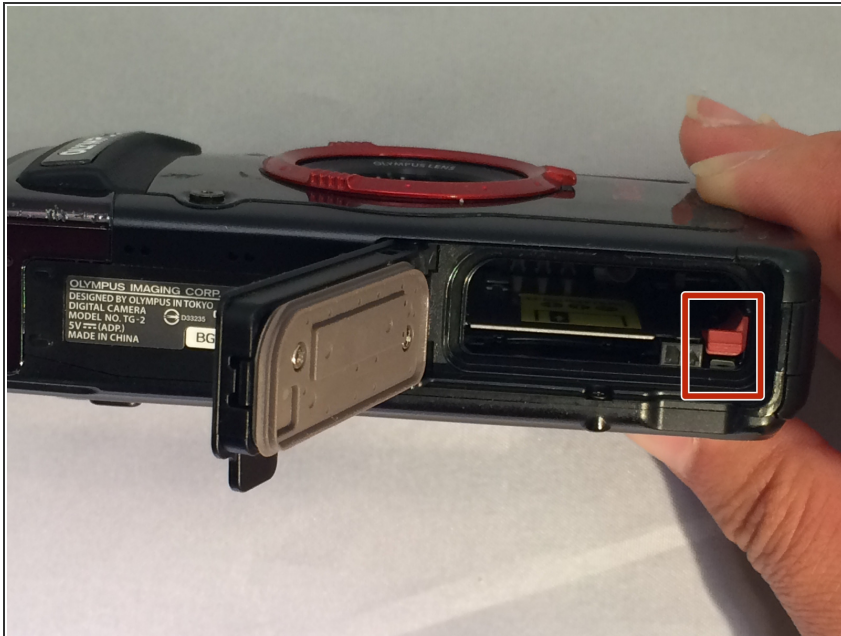

- Press the red tab to eject the battery.
- ⓘ Take note of the orientation of the battery. It won't operate if inserted upside down.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:34:48 PM.